



BOSCH

Invented for life

Activating BVMS Lite

Author: Verhaeg Mario (BT-SC/PAS4-MKP)
Date: 6 September, 2019

1 Using a BVMS license	3
2 Activating the license	4
2.1 Retrieving the Computer Signature	5

1 Using a BVMS license

Trying out the BVMS is easy! Download the BVMS from the online catalogue and use the [quick installation guide](#) to set-up the system. BVMS Lite contains 8 video channels, 2 workstations, 1 DVR, 2 keyboards, and 1 intrusion panel and can be used without a time limit. BVMS Lite can be expanded to 42 channels using license extensions.

Version	Download
BVMS 10.0	BVMS 10.0 installation

2 Activating the license

Browse to <http://activation.boschsecurity.com> and create a new account. Fill in the required details on the form.

← Homepage ← Bosch Security Systems
Not logged in.

**Bosch Security Systems
Software License Manager**

▶ Login

Manage Account (Create)

The email addresses entered below will be used to inform the user of software updates or other important product information. Non-personalized email addresses are therefore recommended if supported in your organization (e.g. BoschVMS@bosch.com).

Email Address: *

First Name: *

Last Name: *

Job Title:

Company Name: *

Corporate Email:

Address: *

City: *
 State:

Zip/Postal Code: *
 Country: *

I would describe myself as: *

Telephone: x

Mobile Phone:

Fax:

* Required Fields

▲ Top of page

After hitting the "Submit" button an activation link is sent to your e-mail address. The activation link allows you to configure a password. Use your e-mail address and password to login to the system.

Go to the "Create Demo Licenses" page and submit a request to get a demo license or BVMS Lite license for your selected version.

**Bosch Security Systems
Software License Manager**

Customer Operations

- ▶ My Activations
- ▶ Create Demo Licenses
- ▶ Find Activations
- ▶ My Account
- ▶ License Activation
- ▶ Change Password
- ▶ Download Bundle File

Reporting

- ▶ Activation Text Search
- ▶ License Status
- ▶ Maintenance Extension Report
- ▶ Internal Reports
- ▶ Documentation

Mass Emails

- ▶ Email Notifications

License Management

- ▶ License Transfer

Authorizations

- ▶ Authorization Creation


Create Demo License

BVMS Viewer 9.0	<input type="button" value="Submit"/>
APE 3.7+ Demo License	<input type="button" value="Submit"/>
Access Management System Demo (30 days)	<input type="button" value="Submit"/>
Camera Trainer license for DINIONS	<input type="button" value="Submit"/>
Camera Trainer license for FLEXIDOMES	<input type="button" value="Submit"/>
Camera Trainer license for PTZ cameras	<input type="button" value="Submit"/>
BVMS Lite 10.0	<input type="button" value="Submit"/>
BVMS Viewer 10.0	<input type="button" value="Submit"/>


Click the "Submit" button next to the BVMS license package to generate a license key.

2.1 Retrieving the Computer Signature


Start the BVMS Configuration Client. During the first log on the license manager window will open automatically. Open the "Tools" menu and click "License Manager", from the BVMS Configuration Client, to start it manually. Select the checkbox in the yellow column related to BVMS Lite 10.0 (MBV-BLIT-100) and click "Activate".

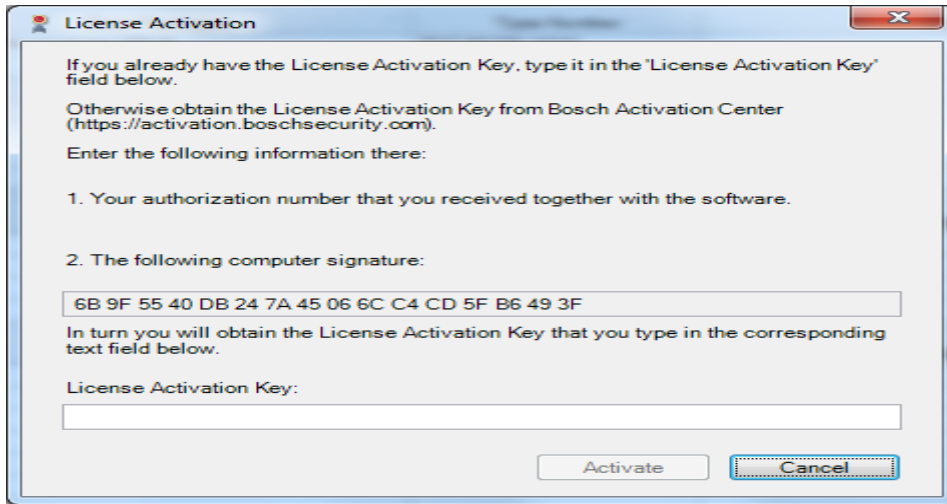

Copy the computer signature to the license activation window, shown below, fill in the necessary details, and click "Submit".

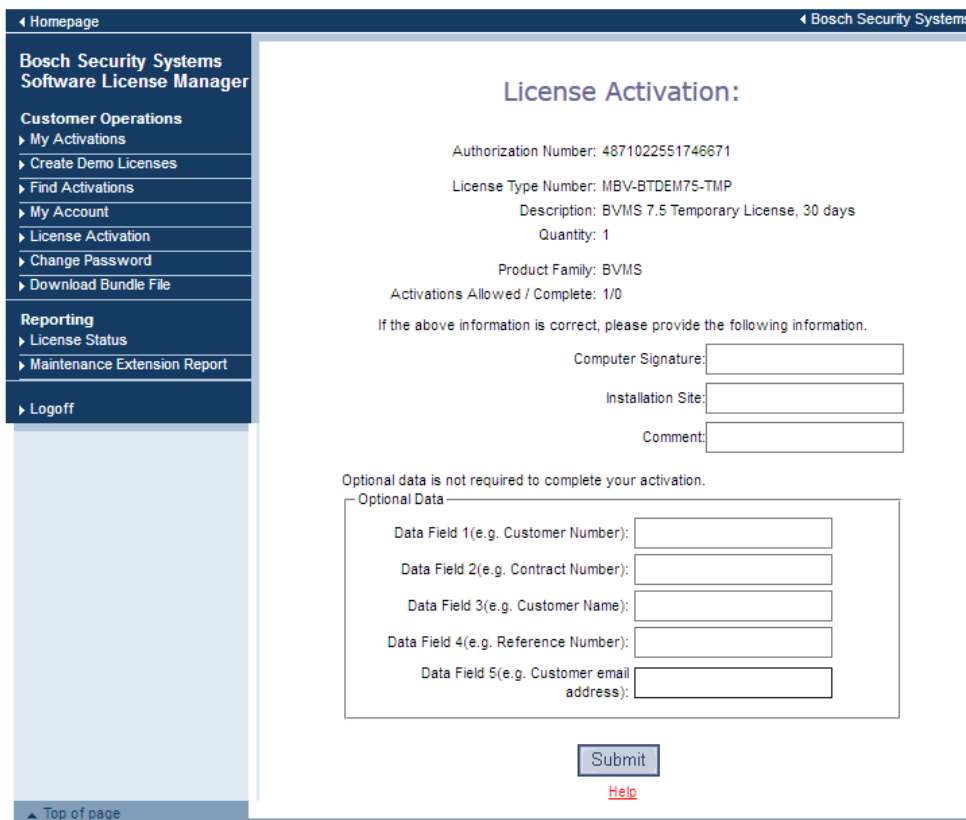

The license activation information appears, including an "Authorization Number". Copy the authorization number and paste it into the License Activation window, as shown below.

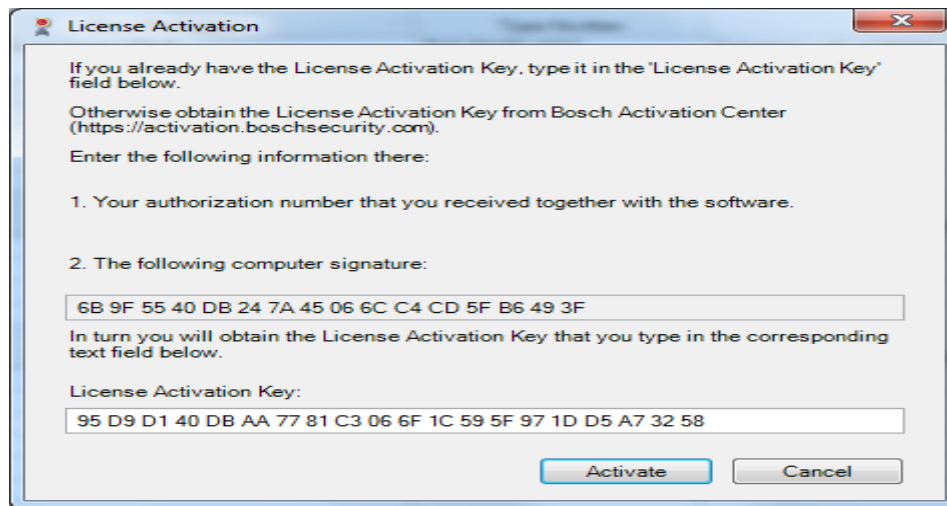

Click "Active". Your system is now ready to be used.