

How to ping a workstation from the Divar

Technical Brief

Feature

The Divar AN 3000/5000 features the ability to ping an IP address from the Divar, thus allowing the technician to verify that the workstation that is to connect to the Divar can be seen on the network.

- ✓ Please note that this does not mean that the ports needed to connect to the Divar are open, this just verifies that the IP address that is input is responding on the network

How-to

Select **Main Menu** → **Setting** → **Info** → **Network info**

- Enter the IP address of the workstation into the **“Destination IP”** input box and select test
- The results of the ping and network status will be shown beside **“Test result”**

