

How to set Monitor B output

Technical Brief

Question

How are displayed cameras/cameos changed on Monitor B?

How-to

The only way to change what is displayed on monitor B is via the monitor B sequence setup

Select **Main Menu** → **Advanced** → **Sequence Mon. B**

Everything that is selected in all of the “Split” views is what is going to be displayed. If video from only one camera is wanted, make sure all cameras/views are unchecked in all other views.

- Select the “Enable sequence” box
- Interval: This value ranges from 5 (default) to 120 seconds and is used if more than one camera/view is selected in the “Split” selection
- Split: Choose here which tour combination is displayed (1, 4, 8, 9 and 16 windows). If required, use the **Add**, **Delete**, **Move up** or **Move down** buttons to adjust the view settings.

