


# Transitioning cameras from Project Assistant to BVMS (1/3)

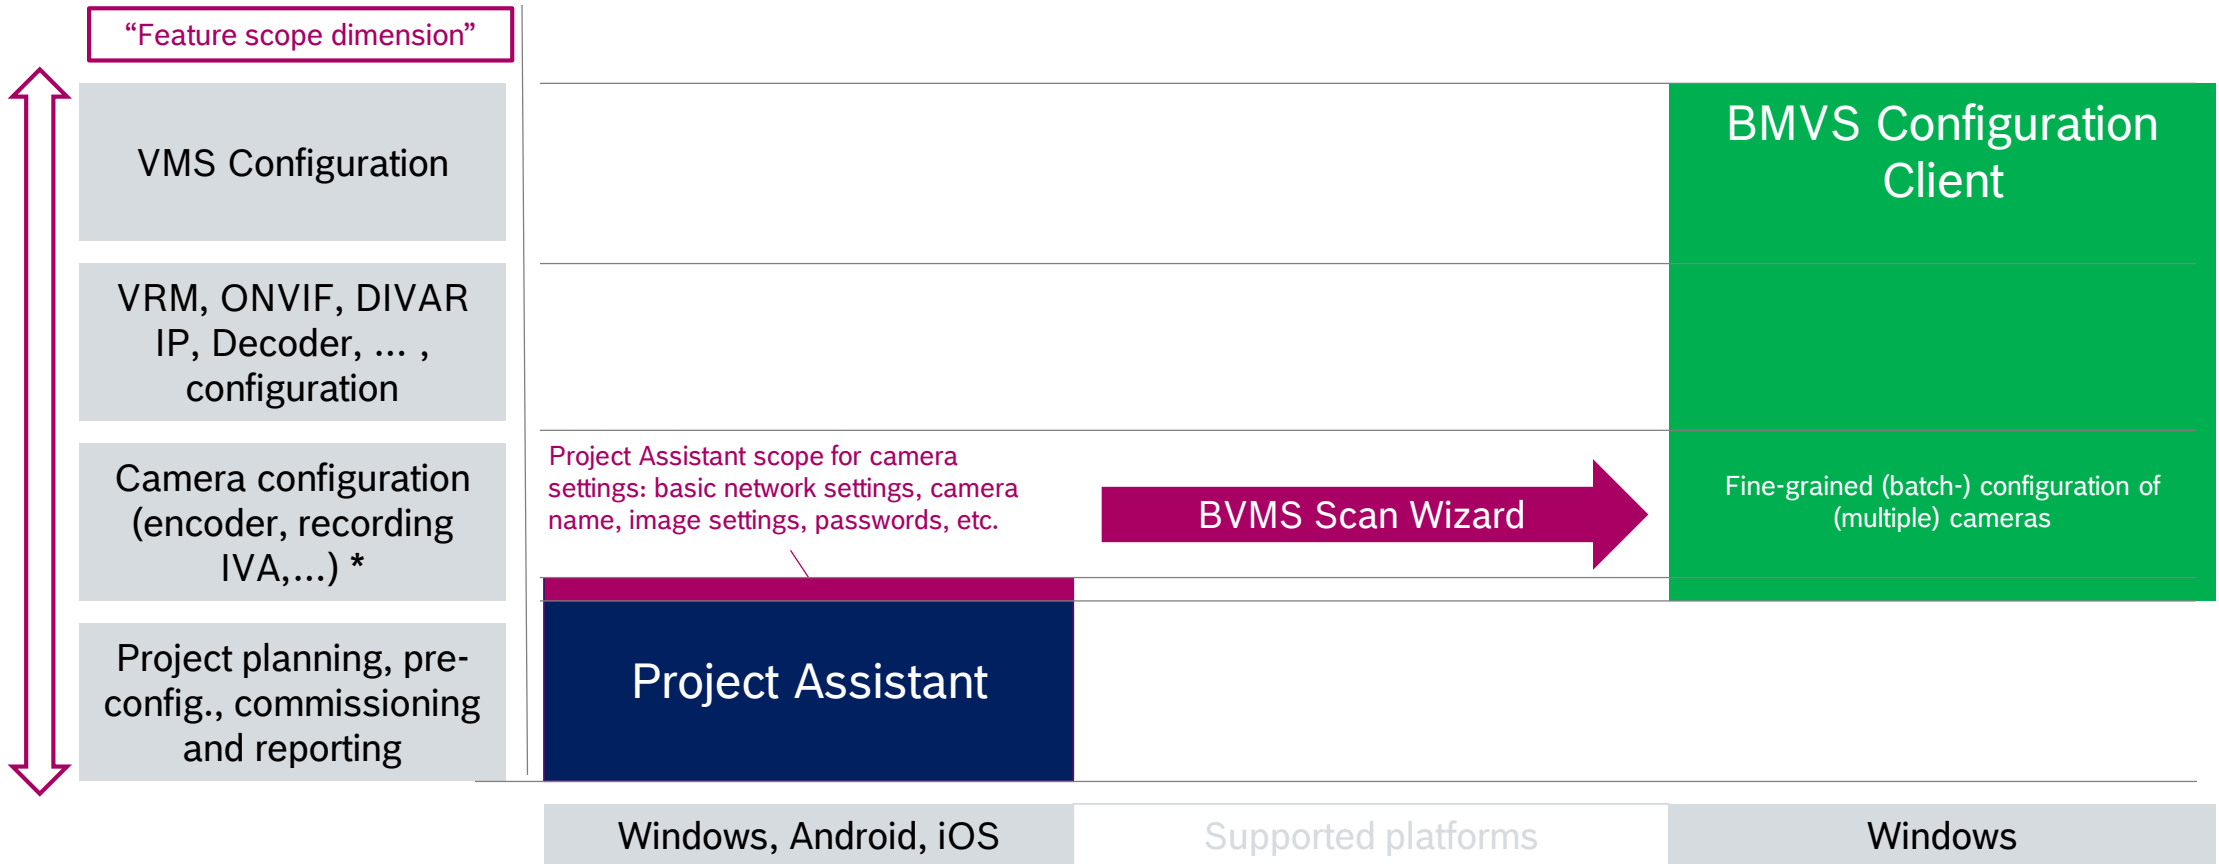

# Transitioning cameras from Project Assistant to BVMS (2/3)

## BMVS Configuration Client – Import via BVMS Scan Wizard

**BVMS Scan Wizard**

Step 1/2: Assign Encoders

Assign the devices you want to include into the configuration to the existing VRM pools.  
Click the buttons to move the devices between the two panes.

Devices (562):

Type	Display Name	Network Address
Dinion IP	172.21.2.1	172.21.2.1
DINION IP 7000 HD	DINION IP 7000 HD_2.53	172.21.2.53
DINION IP starlight 7000 HD	DINION starlight 7000 HD_2.55	172.21.2.55
VideoJet X20	Eisenbahn-Steuerung-Relais1	172.21.2.100
DINION IP ultra 8000 MP	DINION IP ultra 8000 MP_S3-test	172.21.3.5
Dinion IP starlight 8000 MP	DINION IP starlight 8000 MP_3.7	172.21.3.7
Dinion IP starlight 8000 MP	DINION IP starlight 8000 MP_3.8	172.21.3.8
AVIOTEC IP starlight 8000	AVIOTEC IP starlight 8000_3.10	172.21.3.10
Fire Eye	Fire Eye_3.11	172.21.3.11
DINION IP ultra 8000 MP	DINION ultra 8000 MP_S2E 65129	172.21.3.12
Dinion IP starlight 8000 MP	DINION IP starlight 8000MP_3.13	172.21.3.13
Dinion IP starlight 8000 MP	DINION starlight 8000 MP_3.14	172.21.3.14
Dinion IP starlight 8000 MP	Moni/hall/Matcher	172.21.3.15
Unsupported FPGA version, using DIII	DINION IP ultra 8000 MP_3.16	172.21.3.16
DINION IP ultra 8000 MP	DINION ultra 8000 MP_3.17	172.21.3.17
DINION IP ultra 8000 MP	DINION IP ultra 8000 MP_3.18	172.21.3.18
DINION IP ultra 8000 MP	DINION IP ultra 8000 MP_3.19	172.21.3.19
SNC-HMX70	172.21.3.20	172.21.3.20
FLEXIDOME IP panoramic 7000 MP	Pano 7000 360° Ceiling_3.24	172.21.3.24
FLEXIDOME IP panoramic 5000 MP	Rola_3.25	172.21.3.25
FLEXIDOME IP panoramic 7000 MP	FLEXIDOME IP panoramic 7000 MP	172.21.3.27
SNC-HMX70	SNC-HMX70	172.21.3.28
FLEXIDOME IP panoramic 7000 MP	Aloha_3.29	172.21.3.29
FLEXIDOME IP panoramic 7000 MP	172.21.3.30	172.21.3.30

VRM\_5242

- Pool 0
  - AUTODOME IP 4000i\_24.38
  - AUTODOME IP 4000i\_24.39
  - AUTODOME IP 5000 IR\_24.24
  - AUTODOME IP 5000i\_24.44
  - AUTODOME IP 5000i\_24.45
  - AUTODOME starlight 7000 HD\_23.4
  - Atlantis\_2MP
  - Atlas 4.1
  - Autodome 5000 HD\_24.21
  - Autodome5000i\_24.43
  - DINION IP dynamic 7000 HD\_2.54
  - DINION IP imager 9000 HD\_21.130
  - DINION IP starlight 6000 HD (172.21.3.47)
  - Dinion IP 5000 HD\_21.23
  - Dinion IP 5000 MP\_21.22
  - Dinion bullet 4000 HD\_A5\_4.43
  - FLEXI IP micro 2000\_21.110
  - FLEXI outdoor 4000 HD\_23.12
  - FLEXI outdoor 5000 HD\_23.19
  - FLEXIDOME IP 5000i IR (172.21.2

Buttons: Assign, Assign All, Remove, Remove All

Navigation: << Previous, Next >>, Cancel

**BVMS Scan Wizard**

Step 2/2: Authenticate Devices

Please authenticate all the devices in the table.

Devices (19):  Show passwords

Type	Display Name	Network Address	User Name	Password	Status
172.30.11.16	172.30.11.16	172.30.11.16	service	*****	🟢
FLEXIDOME IP starlight 8000i (1	172.30.11.31	172.30.11.31	service		🔒
DINION IP starlight 7000 HD (17	172.30.11.35	172.30.11.35	service		🔒
DINION IP starlight 8000 MP (17	172.30.11.42	172.30.11.42	service		🔒
FLEXIDOME IP outdoor 4000 IR (1	172.30.11.114	172.30.11.114	service		🔒
MIC IP starlight 7100i (172.30.	172.30.11.118	172.30.11.118	service		🔒
VIP X1600 (172.26.5.13)	172.30.11.151	172.30.11.151	service		🔒
FlexiDome panorama 7000 12MP 18	172.30.11.154	172.30.11.154	service		🔒
DINION IP ultra 8000 MP (172.30	172.30.11.187	172.30.11.187	service		🔒
DIN IP 8000 (fae)	172.30.11.211	172.30.11.211	service		🔒
DINION IP starlight 7000 HD (CP	172.30.11.216	172.30.11.216	service		🔒
172.30.11.245	172.30.11.220	172.30.11.220	service		🔒
172.30.11.223	172.30.11.223	172.30.11.223	service		🔒
172.30.11.226	172.30.11.226	172.30.11.226	service		🔒
172.30.11.230 (6.41.37 Y)	172.30.11.239	172.30.11.239	service		🔒
AutoDome 7000 IP (172.30.11.253	172.30.11.253	172.30.11.253	service		🔒
172.30.12.19	172.30.12.6	172.30.12.6	service		🔒
172.30.12.11	172.30.12.11	172.30.12.11	service		🔒
172.30.12.15	172.30.12.15	172.30.12.15	service		🔒

Navigation: << Previous, Finish, Cancel

# Transitioning cameras from Project Assistant to BVMS (3/3)

## BMVS Configuration Client – Import via BVMS Scan Wizard

**BVMS Scan Wizard**

Step 2/2: Authenticate Devices

Please authenticate all the devices in the table.

Devices (19):  Show passwords

Type	Display Name	Network Address	User Name	Password	Status
☐	172.30.11.16	172.30.11.16	service	*****	🔒
☐	FLEXIDOME IP starlight 8000i (1	172.30.11.31	service		🔒
☐	DINION IP starlight 7000 HD (17	172.30.11.35	service		🔒
☐	DINION IP starlight 8000 MP (17	172.30.11.42	service		🔒
☐	FLEXIDOME IP outdoor 4000 IR (1	172.30.11.114	service		🔒
☐	MIC IP starlight 7100i (172.30.	172.30.11.118	service		🔒
☐	VIP X1600 (172.26.5.13)	172.30.11.151	service		🔒
☐	FlexiDome panorama 7000 12MP 18	172.30.11.154	service		🔒
☐	DINION IP ultra 8000 MP (172.30	172.30.11.187	service		🔒
☐	DIN IP 8000 (fee)	172.30.11.211	service		🔒
☐	DINION IP starlight 7000 HD (CP	172.30.11.216	service		🔒
☐	172.30.11.245	172.30.11.220	service		🔒
☐	172.30.11.223	172.30.11.223	service		🔒
☐	172.30.11.226	172.30.11.226	service		🔒
☐	172.30.11.230 (6.41.37 Y)	172.30.11.239	service		🔒
☐	AutoDome 7000 IP (172.30.11.253	172.30.11.253	service		🔒
☐	172.30.12.19	172.30.12.6	service		🔒
☐	172.30.12.11	172.30.12.11	service		🔒
☐	172.30.12.15	172.30.12.15	service		🔒

Test  
Copy cell to column  
Remove

<< Previous Finish Cancel

**BVMS Scan Wizard**

Step 2/2: Authenticate Devices

Please authenticate all the devices in the table.

Devices (38):  Show passwords

Type	Display Name	Network Address	User Name	Password	Status
☐	Atlantis_2MP	160.10.2.70	service	*****	🟢
☐	DINION IP dynamic 7000 HD_2.54	172.21.2.54	service	*****	🟢
☐	Pano 7000 180° Ceiling_3.21	172.21.3.21	service	*****	🟢
☐	Pano 7000 180° Wall_3.22	172.21.3.22	service	*****	🟢
☐	FLEXIDOME IP pano 5000 MP_3.23	172.21.3.23	service	*****	🟢
☐	SNC-EMX50R_DHCP	172.21.3.36	service	*****	🟢
☐	Poxie 1080p60 IVA_3.40	172.21.3.40	service	*****	🟢
☐	DINION IP starlight 6000 HD (172.21.3.47)	172.21.3.47	service	*****	🟢
☐	Dinion bullet 4000 HD_A5_4.43	172.21.4.43	service	*****	🟢
☐	Dinion IP 5000 MP_21.22	172.21.21.22	service	*****	🟢
☐	Dinion IP 5000 HD_21.23	172.21.21.23	service	*****	🟢
☐	TINYON IP 2000 PIR (172.21.21.8	172.21.21.81	service	*****	🟢
☐	TINYON IP 2000 HD (172.21.21.82	172.21.21.82	service	*****	🟢
☐	FLEXIDOME micro 5000 MP_21.100	172.21.21.102	service	*****	🟢
☐	FLEXIDOME micro 2000 HD_21.103	172.21.21.103	service	*****	🟢
☐	FLEXI IP micro 2000_21.110	172.21.21.110	service	*****	🟢
☐	DINION IP imager 9000 HD_21.130	172.21.21.130	service	*****	🟢
☐	FLEXIDOME IP 7000 VR_22.4	172.21.22.4	service	*****	🟢
☐	FLEXIDOME outdoor 5000 IR_22.11	172.21.22.11	service	*****	🟢
☐	AUTODOME starlight 7000 HD_23.4	172.21.23.4	service	*****	🟢
☐	FLEXIDOME IP outdoor 5000 IR (1	172.21.23.11	service	*****	🟢
☐	FLEXI outdoor 4000 HD_23.12	172.21.23.12	service	*****	🟢
☐	FLEXIDOME IP 5000i IR (172.21.2	172.21.23.14	service	*****	🟢
☐	FLEXIDOME IP outdoor 5000 IR (1	172.21.23.15	service	*****	🟢

<< Previous Finish Cancel