

Bosch VMS - PC Keyboard Layout



General Controls

Show Online Help	F1
Rename (e.g. in favorites)	F2

Playback Controls

Play / Pause	Space
Previous frame	,
Next frame	.
Set direction to forward	Enter
Set direction to backward	Backspace
Jump to oldest recording	Home
Jump to latest recording	End
Increase playback speed	Page Up
Decrease playback speed	Page Down

Image Window Controls*

Move selected Image pane	Cursor Keys
Close Image pane	Delete
Close all Image panes	Ctrl+Delete
Show less Image panes	F7
Show more Image panes	F8
Toggle Image pane bars	F9

* is only working when Image window has focus